




Firefly[®]₃

Operating Instructions

- ❖ Slide thumb switch to the ON position to arm the strobe. NOTE: The Firefly[®]₃ Waterbug™ must be submerged in water to activate it once the unit is armed.
- ❖ Slide thumb switch down to deactivate the strobe light.

Maintenance

- ❖ Open the battery door in a clean environment, and only to replace batteries.
- ❖ Keep battery door O-ring clean and free of debris accumulation.
- ❖ Clean battery door thoroughly if necessary to ensure watertight integrity.
- ❖ Avoid using abrasive or sharp objects to handle O-ring.
- ❖ Lubricate the entire O-ring with silicone based grease prior to closing to ensure a water-tight seal.

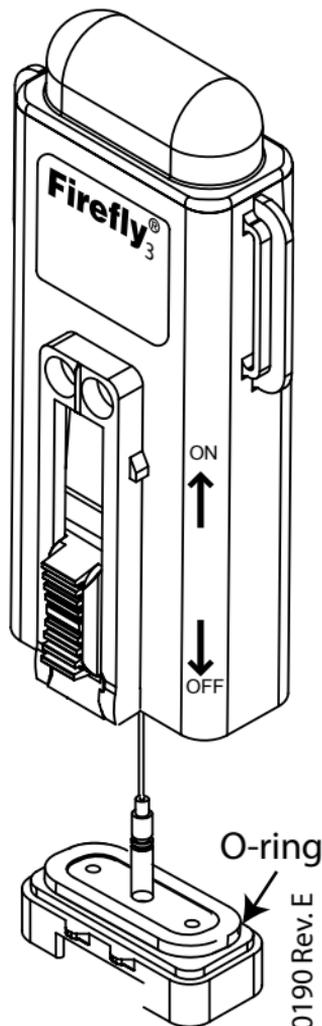

ACR Electronics, Inc.
5757 Ravenswood Road, Fort Lauderdale, FL 33312 U.S.A
Worldwide: +1 (954) 981-3333 Fax: +1 (954) 983-5087
www.acrartex.com